
Installation Addendum and Parts List Access Dual Roller FlexShade System by Draper

Please Note: Your Access Dual Roller FlexShade may not contain all of the parts listed below. This document is meant as a general guide to aid in the identification of parts you do receive.

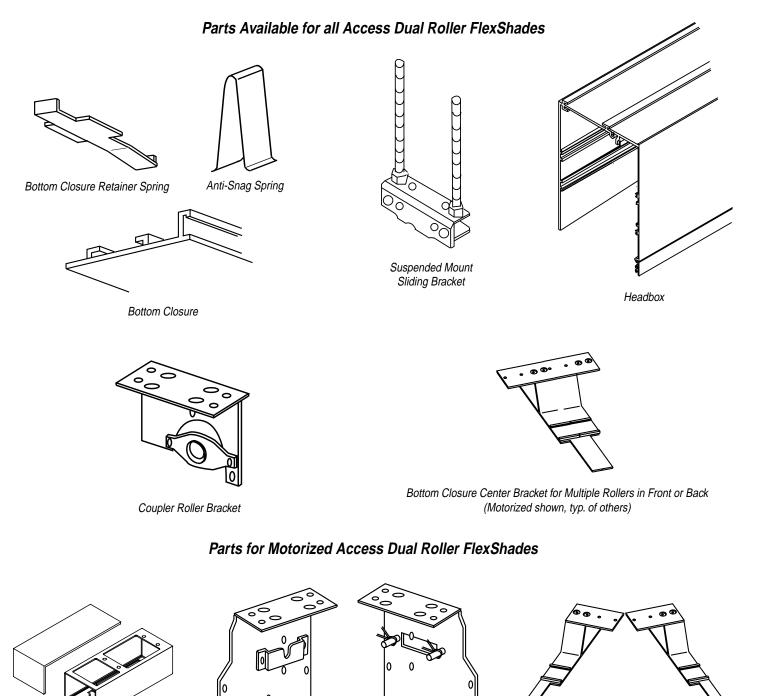

Bottom Closure End Brackets

Motorized Operator Brackets



J-Box

(with Cover)

 411 S. Pearl St., Spiceland, IN 47385 USA I 765-987-7999 I fax 765-987-7142

 e-mail draper@draperinc.com

 www.draperinc.com

 Copyright © 2002 Draper, Inc.


 Form AccessDualRoller_Parts-02

 Printed in U.S.A.


Access Dual Roller FlexShade System by Draper

Page 2 of 2

Parts for Clutch-Operated Access Dual Roller FlexShades

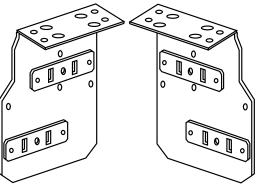



Bead Chain Operator Brackets

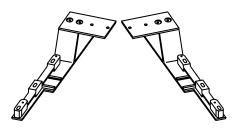

Bottom Closure End Brackets

Parts for Crank-Operated Access Dual Roller FlexShades

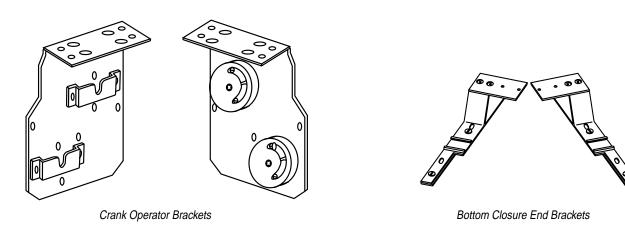

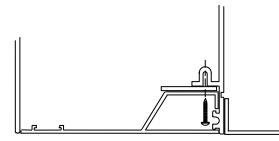

Dual Roller Headbox End Bracket—Side View (Motorized shown, typ. of others)

 
Parts for Access Dual Roller FlexShades with Side/Sill Channels





Side Channel (For Side Channel Units)

Fabric Guide (For Side Channel Units)



Face Mount

Inside Mount

Sill Channel (For Side Channel Units)

If you encounter any difficulties installing or servicing your Access Dual Roller FlexShade System, call your dealer or Draper, Inc., Spiceland, Ind., (765) 987-7999, fax (765) 987-7142, or e-mail draper@draperinc.com.