

ENGLISH

Transmitters enable the user to control one or more motors with receiver, installed on awnings, shutters and screens.
The radio signal is shown by the transmission LED. If the LED doesn't blink after the button pressure, then the battery has to be replaced.

PLEASE NOTE: do not use motors with remote controls in areas with risks of radio disturbs over the norm (i.e. airports or radio repeaters). These units may also be disturbed by telecommunication and/or transceiver systems with the same frequency.

PROGRAMMING TRANSMITTER (Fig. 1)

CAUTION: If more motors with receiver have to be installed, it is important to power up only one motor at time during the first programming session, in order to avoid any interferences with the others.

1. Power up the motor to be programmed.
2. Hold **SYNC** pressed until the motor starts moving.
3. Check the rotation of the motor, then release **SYNC** (the motor stops).
4. Within 5 seconds press the corresponding button (i.e. **UP** if the motor rotates upwards or **DOWN** if vice versa).

In this way the transmitter has been programmed and the rotation of the motor has been synchronized.

ADDING TRANSMITTER

1. Hold **SYNC** pressed of a transmitter already paired until the motor starts moving.
2. Check the rotation of the motor, then release **SYNC** (the motor stops).
3. Within 5 seconds press the corresponding button (i.e. **UP** if the motor rotates upwards or **DOWN** if vice versa) on the new transmitter being added.

Additional transmitter is now added

CHECKING/CHANGING DIRECTION (Fig.2)

1. Press **UP** or **DOWN** the motor should go **UP** or **DOWN**, otherwise to change direction:
2. Press and hold **SYNC** button till the motor starts moving.
3. Press **STOP**: The motor makes a brief jog.

Direction of the motor has been reversed.

ERASING TRANSMITTERS

Push simultaneously **SYNC** and **STOP** of the transmitter until the motor makes a brief movement in both directions.

Only the transmitter used for this procedure has been deleted from motor memory

RESET TRANSMITTER MEMORY (DELETING ALL THE TRANSMITTERS OR CHANNELS OR SENSORS)

Option 1 (Fig. 3.1)

Using an already programmed transmitter press and hold both **SYNC** and **STOP** buttons till the motor makes first a brief jog and, after a while, a second long jog. Memory is now empty.

Option 2 (Fig. 3.2)

1. Without an already programmed transmitter switch the motor power supply **OFF**. Then switch it **ON**.
 2. Within 8 seconds, using any transmitter, press and hold both **SYNC** and **STOP** buttons until the motor makes a long jog.
- Memory is now empty.

LIMIT SWITCH SETUP (ATTENTION: Just for motors with electronic limit switch).

ALWAYS SET THE UP LIMIT SWITCH FIRST.

1. Push **LIMIT** till the motor makes a brief movement in both direction
Note: during "programming mode" the operations are in "deadman control"
2. Press and hold the **UP** button and run the motor to the desired **UP** limit position.
3. Press **STOP** to set the **UP** limit position. The motor makes a brief jog.
4. Press and hold the **DOWN** button and run the motor to the desired **DOWN** limit position.
5. Press **STOP** to set the **DOWN** limit position. The motor makes a brief jog.

Note: Accurate limit setting can be performed when UPWARD or DOWNWARD by pressing a second time LIMIT: the motor then moves slowly in steps towards to the desired limit. Always press STOP button to set the limit position.

AUTOMATIC SETTING OF THE LIMITS

For limits set with torque sensor (mechanical stop of shutters or cassette awnings/shades), press and hold **UP** button until the bottom bar hits the cassette or shutter box.

A short jog will indicate that the **UP** position has been memorized. The same procedure can be followed for **DOWN** limit but only for roller shutters.

INTERMEDIATE POSITION SETUP

Stop the shutter/awning in the desired intermediate position, then press simultaneously the **UP** and **DOWN** buttons until the motor makes a brief movement in both directions. The intermediate position has been setup.

RECALLING THE INTERMEDIATE POSITION

[1 channel version] Keep the **STOP** button pressed at least for 3 seconds.

[5 channel version] Press **PRESET** button.

The shutter/awning will move till it reaches the intermediate position.

ERASING THE INTERMEDIATE POSITION

Press simultaneously the **UP** and **DOWN** buttons until the motor makes a brief movement in both directions.

IMPORTANT: Batteries contain polluting substances. After removing, throw them in the designated batteries collection points.