

Installation Instructions

Snugfold Window Shades by Draper

Caution

- ① Open packaging lengthwise.
- ② Upon opening, measure your Snugfoldsto make sure you have received the correct size shades.
- ③ It is the installer's responsibility to ensure appropriate fasteners are used.
- ④ Units must be installed level for proper operation and side clearance. Use a carpenter's level to check.
- ⑤ Snugfold stacks to approximately one-sixth of its overall height. Make sure there is room for the extra folds of fabric toward the top of the opening.

These instructions are meant as a guide only. They do not imply any responsibility on the part of Draper, Inc. for improper installation or faulty workmanship at the jobsite.

- ① For face wall mounting, use appropriate fasteners through 2½" x 5/8" maple top slat (see Fig. 1). Draper, Inc., will pre-drill 5/16" holes on approximately 30" centers.

NOTE: If shade mounts to mullions on frame inside opening, Draper, Inc., will not pre-drill holes.

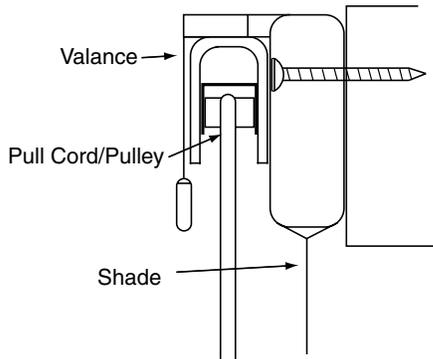


Figure 1

- ② For header or ceiling installation, use angle brackets (see Figs. 2 and 3). Angles may be factory installed on front or back of top slat on approximately 30" centers.

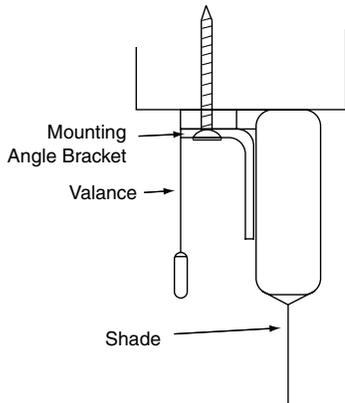


Figure 2

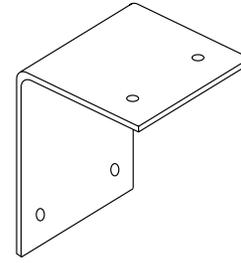


Figure 3

- ③ For jamb mounting, special slotted angle brackets are provided (see Fig. 4).

Caution: Snugfolds greater than 48" wide will require intermediate support when installed with jamb brackets.

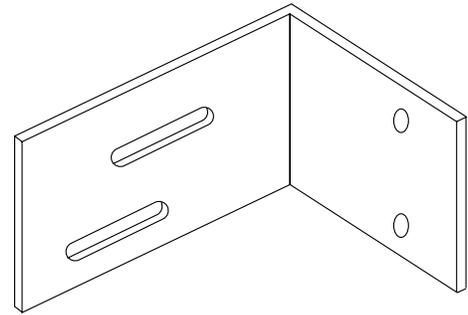


Figure 4

NOTE: Make sure units are installed level, and have proper side clearance (see Fig. 5).

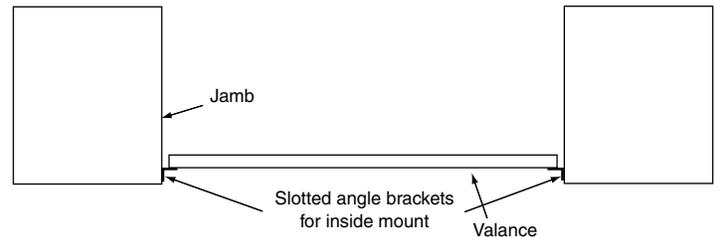


Figure 5

- ④ Operate shades to make sure they are working properly, and that the automatic cord lock is engaging (see Fig. 6).

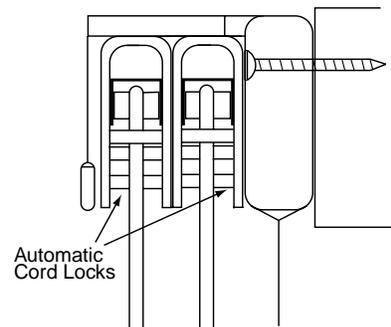


Figure 6

DRAPER