


how to measure standard vertical blinds


Inside Mount (IB) Installation

To find width: Measure the opening across the top where the headrail is to be installed from inside of jamb on left to inside of jamb on right. Round the measurement down to the nearest 1/8". A minimum depth of 2-7/8" is needed to install inside the window.

To find height: Measure from the inside top of the opening on the left, at the center, and on the right to the sill; round the measurement down to the nearest 1/8" and note the smallest dimension. Do not make any allowances: the factory will make all adjustments so the headrail will fit the opening properly and the vanes will clear the sill by 1/4" to 1/2".

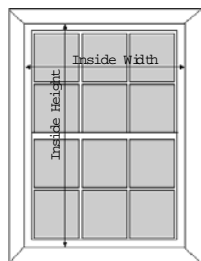

Inside Mount (IB) Depth Requirements

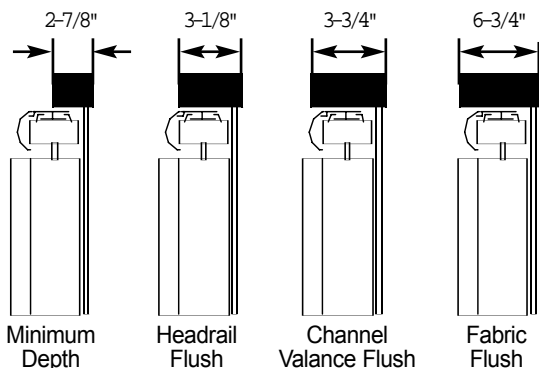


Outside Mount (OB) Installation

To find width: Measure the width of the area to be covered at the place where the headrail will be installed to the nearest 1/8". Blind should overlap opening at least 4" on each side to ensure privacy.

To maximize your view, allow adequate overlap and consider the stack width. To calculate stack dimensions, consult the Vane Count and Stack Size Chart on page 6.

To find height: Measure the height of the area to be covered and round down to the nearest 1/8". Blind should extend at least 3" above and 3" below opening or window moulding. For ceiling-to-floor installations, make adequate allowance for carpeting. Specifying OB measurement means the factory makes no allowances.

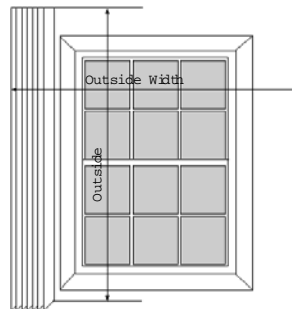


Caution: Blinds installed on windows near wall or baseboard heaters must clear the heaters by 12" above and 6" to the side.

Patio Doors

To find width: Measure the width of the area to be covered at the place where the headrail will be installed to the nearest 1/8". Blind should overlap opening at least 4" on each side to ensure privacy.

To ensure easy access through the door and allow adequate overlap, consider the stack width. To calculate stack dimensions, consult the Vane Count and Stack Size Chart on page 6.

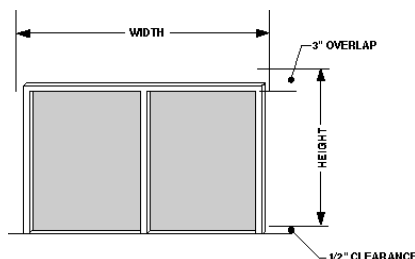

To find height: Measure the height of the area to be covered and round down to the nearest 1/8". Blind should extend at least 3" above opening or window moulding. For ceiling-to-floor installations, deduct 1/2" for proper clearance. Specifying OB measurement means the factory makes no allowances.

Note: Not available as bay or corners.